SynopSYS™ Security Management Software







Plug-in IP Module RW132IP0000A

Plug-in GSM/GPRS Module







PC to Panel

Cable

RW132EUSB00A



RISCO Cloud Server



Configuration Software

www.riscocloud.com web interface













- Main Panel RS485 Bus line supports up to 32 Bus devices: Keypads, Expanders, Bus Detectors & Sounders
- 300m max. length for Main Panel Bus line and for Detector Bus lines with standard alarm cable
- 1000m max. length per Bus line with shielded twisted pair Cat. 5 cable, and on condition Bus Test result is above 97%

x6 Output Expanders

per system

4 x 3A Relay

RP296E04000A

Output Expander

8 x 100mA O.C.

Output Expander

RP296E08000A

Voice Module

Long Range Radio

Transmitter

RP432EV0001C

Non-Bus wiring

8 Zone Expander

RP432EZ0800A

x5 per system

Assign Single Zone Expanders to zones

9 & 10 and then add 8 Zone Expanders

in order to reach 50 wired zones

Listen-in &

Speak Module

RW132EVL000A

RPKELPW0000A black with prox x4 wired keypads

Touchscreen Keypads

LightSYS Main Board RP432M00000D

8-50 Zones

4 Partitions

30 User Codes 500 Event Log Selectable Zone Resistance

4 Groups per Partition 4-32 Outputs

RP128KP0200A RP128KPP200A with prox

ProSYS Keypads RP128KCLOICA

LightSYS Keypads RP432KP0000A



x2 per system



For Italian market

Indoor Cube

IP Cameras

RVCM11H0000A



IP Cameras

RVCM5200E0100A

x4 wireless sounders per system

x3 per Wireless Expander

Wireless Sounders

Wireless **Curtain PIR**



2-Way Wireless

x2 per Wireless Expander



Wireless

BWare DT

Wireless Door/ WL Smoke & Window Contacts **Heat Detector**



Wireless CO & Wireless Flood **Gas Detectors** Detector



x50 wireless detectors per system x32 per Wireless Expander

x4 wireless keypads per system



1-Way Keyfob





x16 Rolling Code Keyfobs per system x16 per Wireless Expander

Panic Keyfob Wristband Panic



x50 Zone/Panic Keyfobs per system x32 per Wireless Expander

Bus Zone Expander

Elegant Keypads

RPKELOBOOOOA black

RPKELPW0000A with prox

RPKELOW0000A

RP128EZB000B

Acts as Bus isolator and

Bus detector concentrator

Detector x4 Bus Zone Expanders Bus Lines







Seismic

Wireless Expander

RP432EW8000A



Up to 512 Bus Detectors per system

Up to 32 per Bus Zone Expander, or directly on main panel Bus, with shielded twisted pair Cat. 5 cable

Up to 20 Bus Detectors recommended per Bus Zone Expander or on main panel Bus, for better performance with regular alarm cable, and for higher security



3A Power Supply

RP128EPS000A PCB





Version 7 Mar 2015